Assembly Guide

VISION FITNESS

E3600HRT

COMMERCIAL UPRIGHT FITNESS BIKE

Assembly Guide

E3600HRT
COMMERCIAL UPRIGHT FITNESS BIKE

To avoid possible damage to this Fitness Bike, please follow these assembly steps in the correct order. Before proceeding, find your new Fitness Bike's serial number located on the front axle tube, and enter here:

_____

Refer to this number when calling for service, and enter this serial number on your Warranty Card and in your own records. Be sure to read your Owner's Guide before using your new Fitness Cycle.
If any parts, hardware or tools are missing, please call 1.800.335.4348, Extension 12

NOTE: It is recommended that you apply grease to the threads of each screw as you assemble your Fitness Bike to prevent loosening and noise. Also, during each assembly step, ensure that ALL screws are in place and partially threaded in before completely tightening any ONE screw.

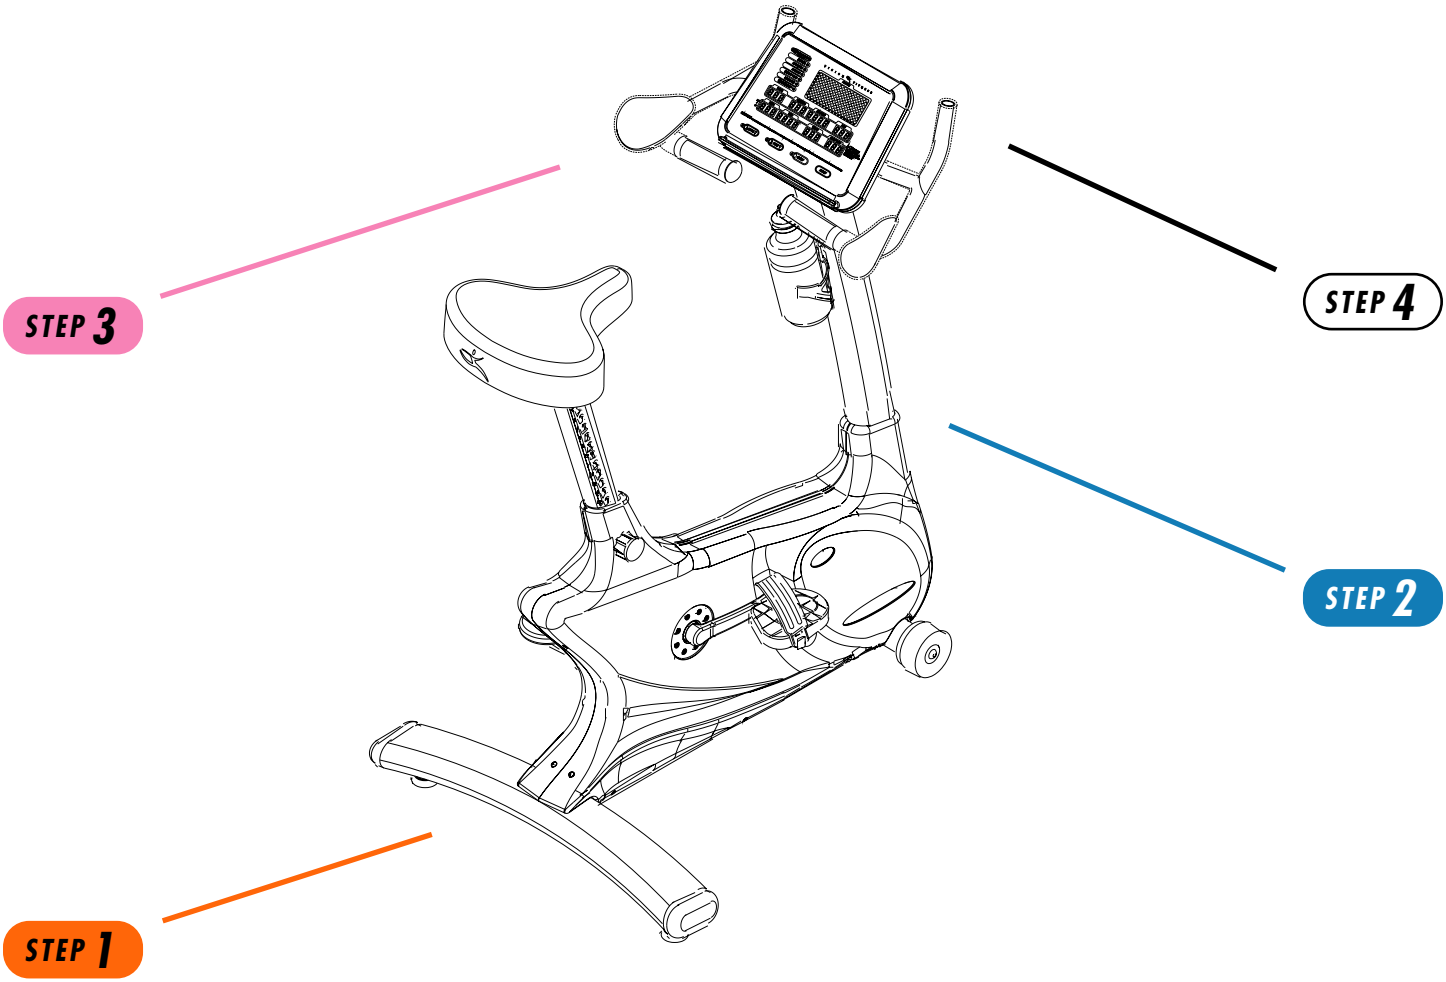

TOOLS & PARTS INCLUDED

5MM Allen Wrench

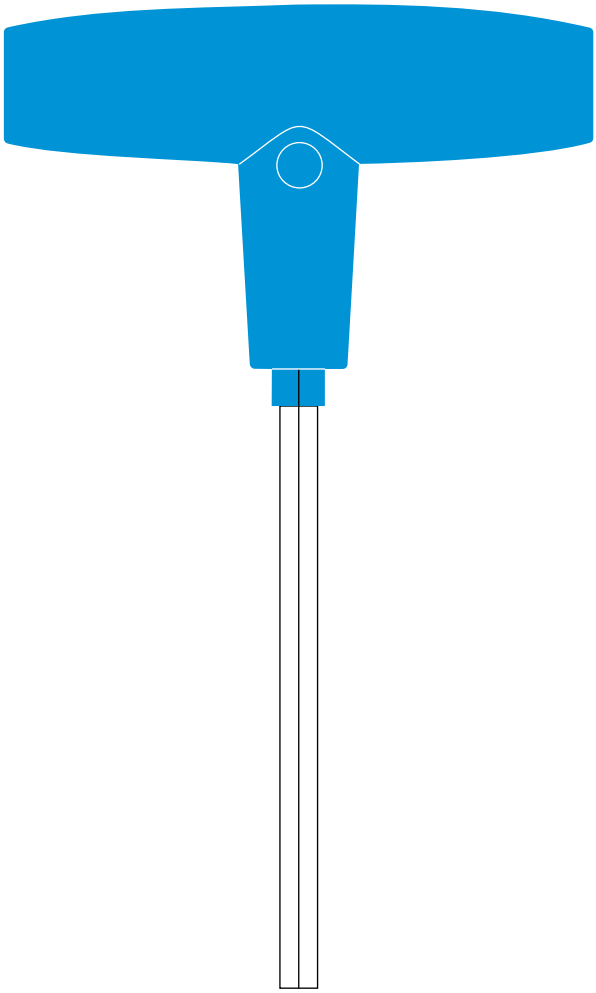

Screwdriver



15MM Pedal Wrench

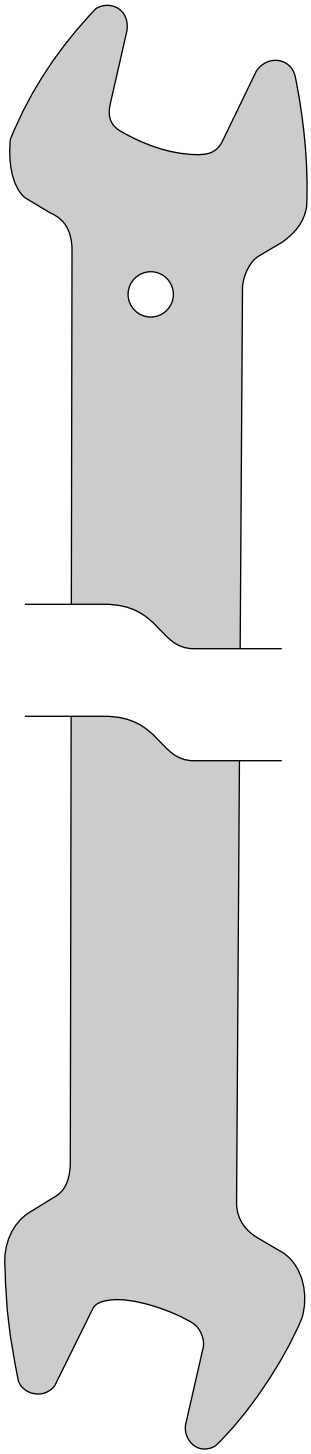

PARTS BOX

Console Mast Cover, Qty: 1
Water Bottle & Cage, Qty: 1
Color-coded Hardware Bags
Owner's Guide, Qty: 1
Assembly Guide, Qty: 1
Warranty Card, Qty: 1
Heart Rate Chest Strap, Qty: 1

HARDWARE INCLUDED

ORANGE BAG

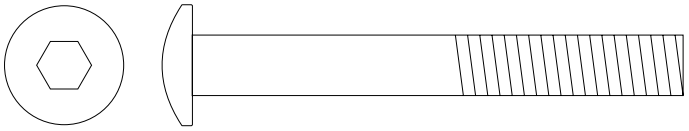

M8 x 65L Screw
Quantity: 2

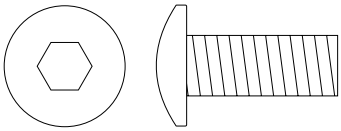

M8 x 20L Screw
Quantity: 2

M8 Lock Washer
Quantity: 4

PINK BAG

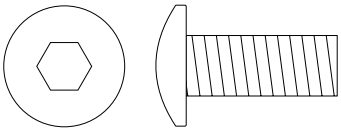

M8 x 20L Screw
Quantity: 2

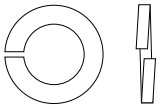

M8 Lock Washer
Quantity: 2

BLUE BAG

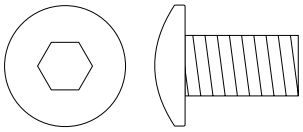

M8 x 15L Screw
Quantity: 7

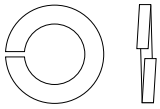

M8 Lock Washer
Quantity: 6

STEP 1

ORANGE BAG

- Install the rear foot with four lock washers (M8), two inside screws (M8x65L), and two outside screws (M8x20L). Tighten with the 5MM Allen wrench.

STEP 1

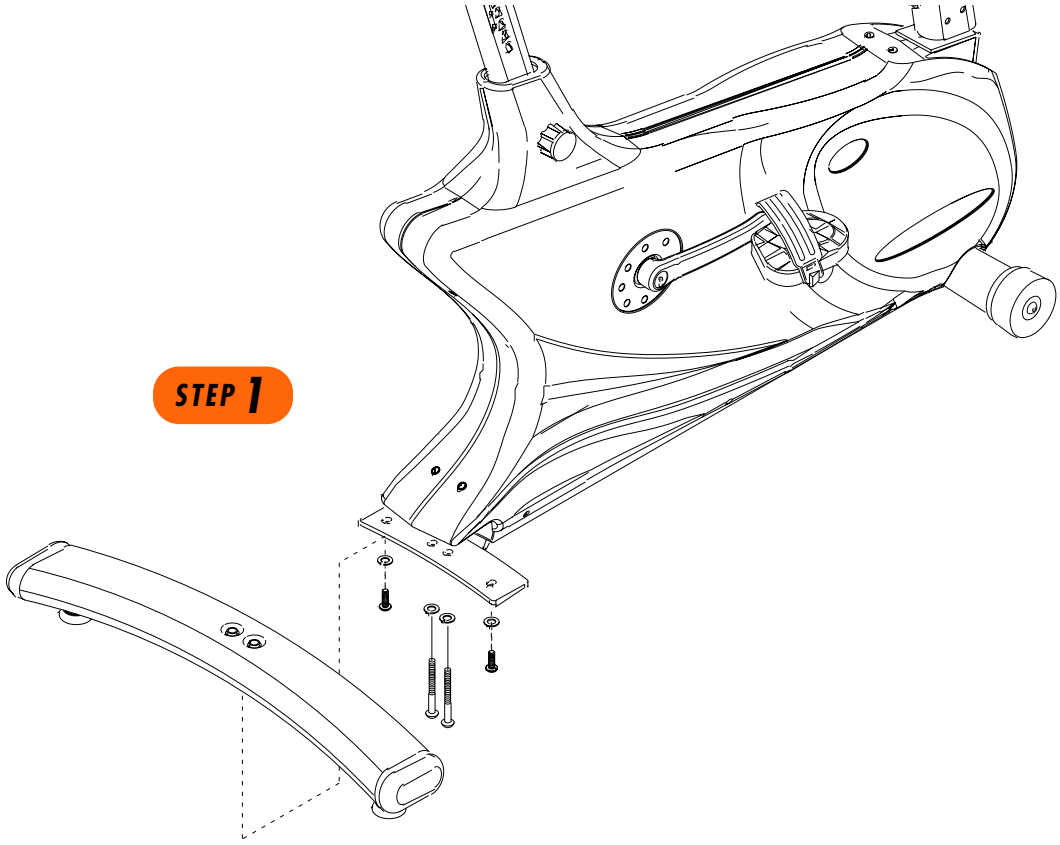

STEP 2

BLUE BAG

- Slide the rubber boot onto the console mast.
- Unfold the wire harness located in the console mast frame bracket. Connect it to the wire tie coming from the bottom of the console mast. Pull the wire tie and wire harness up through the top of the console mast while simultaneously sliding the mast into the frame bracket.
- Secure the mast to the frame using six lock washers (M8) and six screws (M8x15L). Tighten with the 5MM Allen wrench. Place the seventh screw (M8x15L) in the rear of the frame bracket and tighten until snug.
- Slide the rubber boot down and snap it into place on the side cover.
- Remove the nuts (M8) from the bottom of the seat. Attach the seat to the seat post with the nuts you just removed. Tighten with the 15MM wrench.
- Loosen the seat post knob and slide the seat post into place in the seat tube bracket.

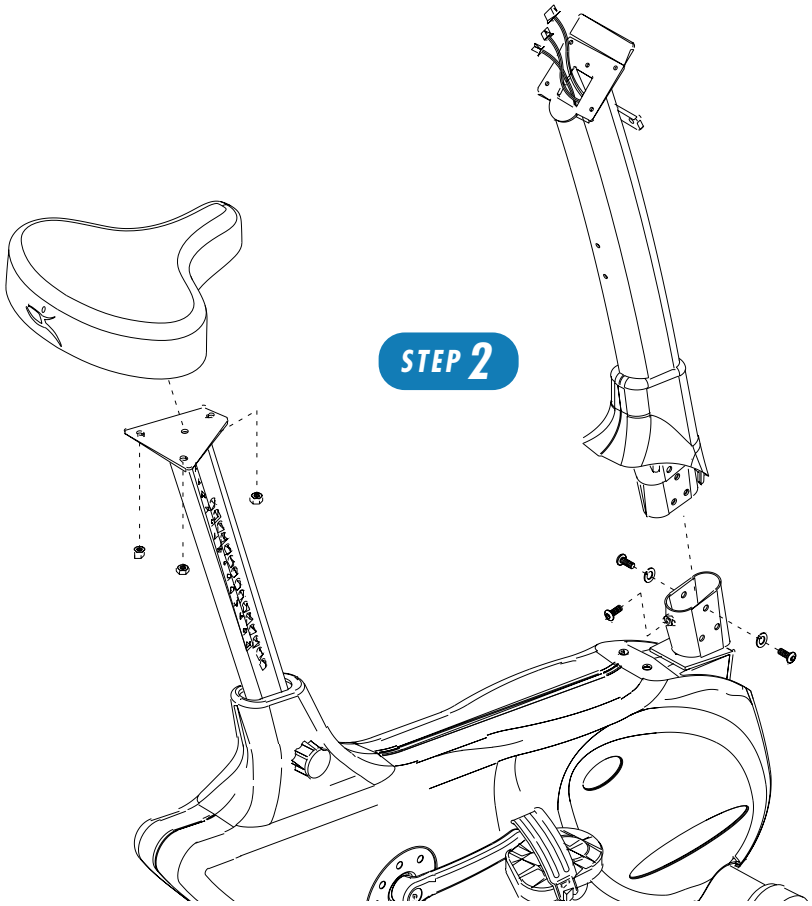

STEP 3

PINK BAG

- Feed the heart rate wires of the handlebar through the small hole located in the front of the console mast. Pull these wires up through the hole at the top of the console mast. Attach the handlebar to the console mast using two lock washers (M8) and two screws (M8x20L). Tighten with the 5MM Allen wrench.

STEP 3

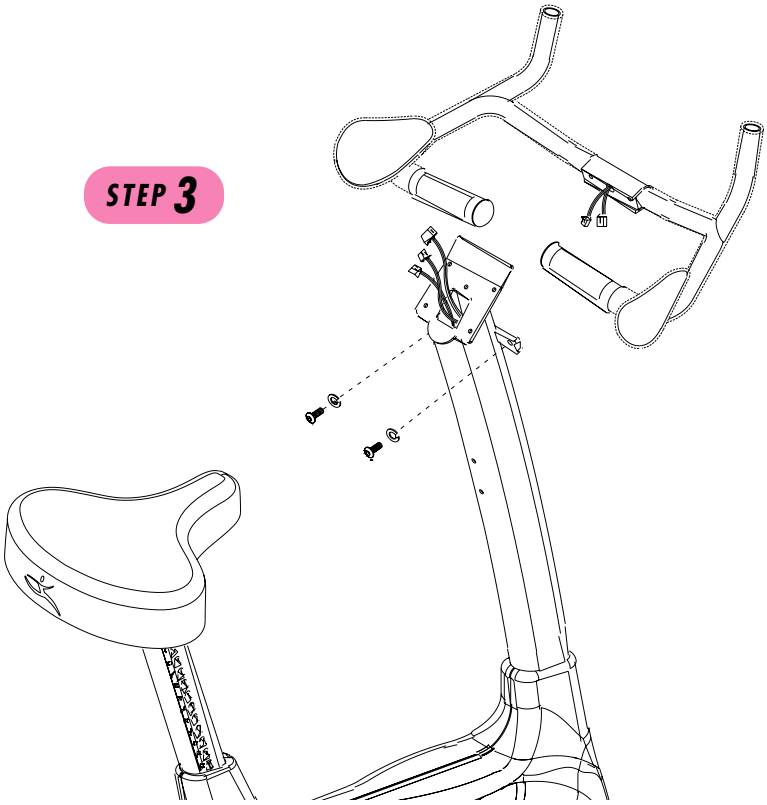

STEP 4

CONSOLE

• Remove the four mounting screws from the back of the console with the Phillips screwdriver. Make sure the 9 Volt battery is plugged in and in place on the back of the console. Connect the wire harness and the two heart rate wires to the receptacles in the back of the console. Attach the console to the console mast with the four screws removed earlier in this step.

• With the Phillips screwdriver, remove the two screws located half way up the console mast. Attach the water bottle bracket to the console mast with the two screws. Insert the water bottle.

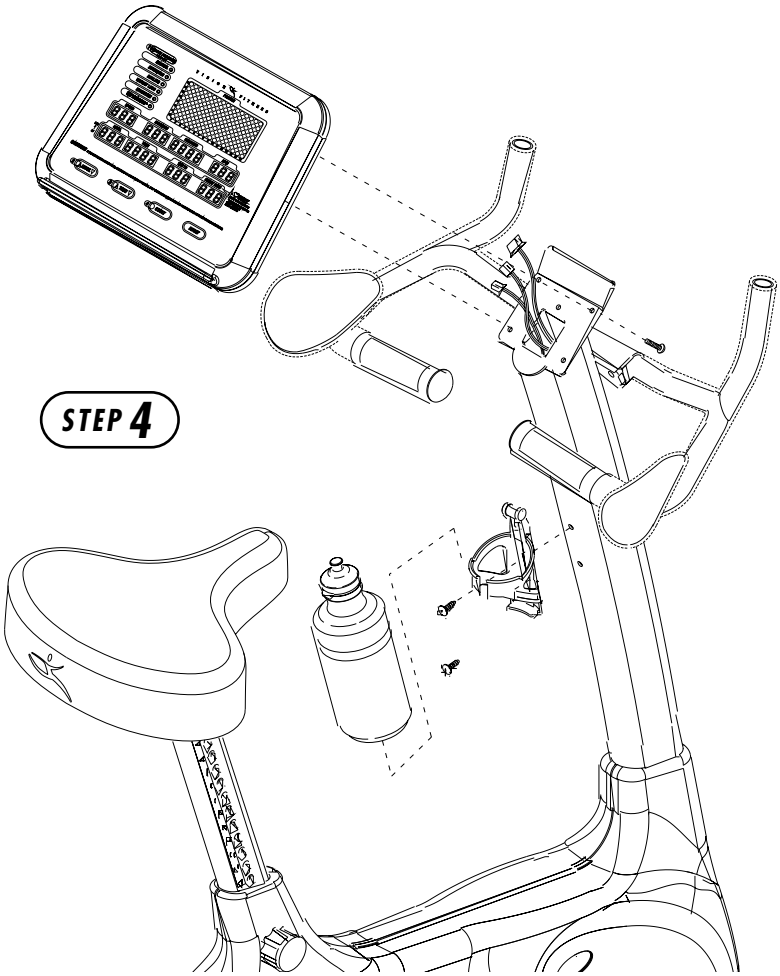

VISION FITNESS

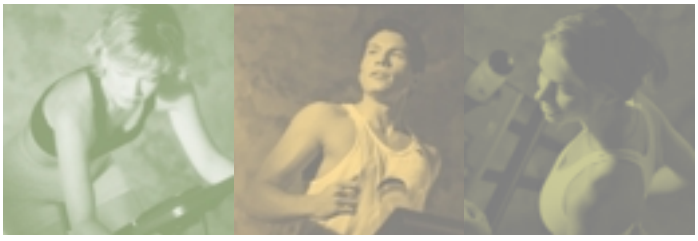

500 South CP Avenue • P.O. Box 280 • Lake Mills. WI 53551
toll free 1.800.335.4348 • phone 1.920.648.4090 • fax 1.920.648.3373
www.visionfitness.com

©2002 Vision Fitness. All Rights Reserved. 8.02 Part #Z36CB39-AG1821PRD
AG18.21PRD
REV1